

# A · X · I · T · E

The amazing IP console



Audio Matrix of 1280x1280  
Up to 126 stereo modules  
N-1 per module for Cleanfeeds  
32 mixing busses  
Up to 16 stereo monitor busses  
Built in Mic processor  
Free assignable knobs

Internal Web server for configuration  
Add a 6 fader Control Surface whenever you need one  
All interfacing over IP  
MambaNet SDK available to add custom functionality  
One platform to create 4 Studios  
Graphic OLED displays  
Elegant Drop Through design



feels good does more

## Table of contents

|       |                               |
|-------|-------------------------------|
| 03    | Table of Contents             |
| 04    | MambaNet                      |
| 05    | Defining your I/O Modules     |
| 06    | Control panels                |
| 07    | Define your I/O cards         |
| 08    | Network Example               |
| 09    | Rack Mounted Break out panels |
| 10    | Maintenance                   |
| 11    | 4 Control Surfaces            |
| 12    | System Configuration          |
| 14-19 | I/O Cards specifications      |
| 20-21 | Control surfaces              |
| 23    | The Company                   |
| 24    | Cabling                       |
| 25    | Technical Highlights          |
| 26    | Mechanical Specifications     |
| 27-28 | Technical Specifications      |

## Your solution for now... and future requirements

### *Maximum return with minimal investments*

**A**xite is the solution for broadcast studios for the demands of today and many years in the future. Not only will the Axite be the “Backbone” of your operation but a complete broadcast studio platform easily adapted to forthcoming technical developments. Designed for imminent growth, it can be expanded to suit your company’s wishes. The following pages will allow you a look and virtual feel of the future that is already available today!

With competition breathing down your neck and a fortune invested in Announcers, Journalists, program material, and equipment, the design team at D&R developed the Axite for you. So you can start with a small budget and as demands come along, expand the “heart” of your broadcast studio. Build into the foundation of the Axite is a “Design for future needs” technology that will deliver the advanced studio solution you require for your multiple broadcasts for today and future needs.



## We designed MambaNet™, a future proof network platform

### *From a virtual to a practical solution*

Most of us remember those days without internet..... with the D&R Axite, a similar giant step can be made in your broadcast studio complex. All of you use e-mail and brows the Internet, you likely didn't care about the virtual world behind the screen, known as the TCP/IP protocol. Continuously new innovations come along that makes connections to new work surfaces, to processing or other equipment. Just as easy as connecting a computer/tablet to your data-network. D&R introduces MambaNet™ a protocol that runs over Ethernet (Level 2). As part of the engine in the Axite, this means you can make use of the IT skills and equipment standards already available in your company and automatically explore, recognize devices and their functionality. Now that is what we call "FUTURE PROOF". Equipment standards already available in your company and automatically explore, recognize devices, and their functionality. All is established in the background of the system.

### *Built in flexibility for advanced applications*

The **Axite** with its' network platform makes it possible to start with a simple and dedicated solution and as soon as you need more flexibility and/or functionality you can easily add new faders or extra input cards to your network. An ideal solution for equipment and more demanding applications of the future.

### *Reliability vs. Redundancy*

History has proven that redundancy is a beneficial way to solve reliability problems by duplicating critical parts like power supplies, but when building a system using many different components from different manufacturers, redundancy becomes virtually impossible and system reliability becomes very important. The systems of today depend on the connections to other components as well as the system components. Running in the background of the Axite platform, MambaNet™ is implemented on standard Ethernet and is compatible with all safety/security technologies available in the worldwide accepted Ethernet network (e.q. Spanning tree protocol, trunking).

The Axite consists of several system components divided in two groups:

- **Control surfaces**

The D&R Axite is completely modular and allows selection out of various control surfaces. We can supply a 6 fader drop through main frame and a 6 fader extender frame to built any number of faders you need. As technology moves forward and your needs are growing, even our high end AXUM fader panels can be added to the system.

- **I/O Racks**

An I/O rack is built using a 19" rack frame with a controller card (the engine), DSP card(s), I/O card(s) and power supply card(s). An example of a starter system is to have one I/O rack and one 6 fader control surface. If you require more control over your I/O's you simply add an AXITE Extender control surface to your networked platform. With the same simplicity you can add a new I/O rack to your networked platform to have a new mixing console for another broadcast studio.



## One Network ...



## ... Many work surfaces

### Defining your I/O modules

The concept of modular control surfaces fits perfectly in the virtual world of networking. With the D&R MambaNet™ network, you'll only need to determine what the 'perfect layout' for your broadcast studio should be by selecting the right control surface modules needed for your application. When you connect the preferred surfaces to the MambaNet™ network, it is then possible to configure your system so the knobs and switches do what you want them to do. With the six fader main fader unit including Control Room/ Phones Panel, it is possible to create a small, medium, or large "easy to understand" On-Air or production console. This platform will become even more flexible as other smaller and larger control surfaces are added to the Axite I/O rack. So keep up with the developments for the Axite on our website at: [www.d-r.nl](http://www.d-r.nl) or contact your D&R Dealer or Distributor today.

With the D&R Axite's modular concept, MambaNet™ controls the primary portion of the I/O rack. Each I/O card is shared in the network and can be controlled from the network. The I/O cards together with the rack will behave as a large Matrix in the network. If one or more DSP cards are inserted, your matrix will have mixing capabilities. Available I/O Cards are:

- Microphone inputs
  - Line inputs
  - Digital in/outputs
  - Line outputs
  - CRM/Phones outputs
  - CobraNet in/outputs
  - FireWire in/outputs
  - \* AES67 in/outputs
- and more to come.....





## 6 Fader Broadcast Panel


Creating your own control surface layout is as easy as selecting different panels. The broadcast panel as seen above contains 4 modules with faders. The various AXUM frames allow you to add 4, 8, 12, 16 or more faders in a single control surface. The modularity and power of MambaNet™ makes it possible to have up to 4 frames connected to a single Engine (I/O rack). That makes it possible to create 4 independant studios with more surfaces controlling your engine. The following controls can be found on this panel.

- 1) Display for module information.
- 2) Encoder for data entry.
- 3) Small switches (e.g. A/B select & routing).
- 4) Large switches (e.g. CUE, ON / START & STOP).
- 5) Faders.

## Control Room Panel

The following controls and switches can be found on the right side of this panel.


- 1) Switches that determine which function the channel encoder will perform. and your presets.
- 2) Processing and EQ selection.
- 3) Remote Control switches to control your play-out system.
- 4) Monitor source selection switches such as program Sub Auxes and Dump buss.
- 5) Phones and CRM levels for both Studio and Control Room.
- 6) Talk back switches.

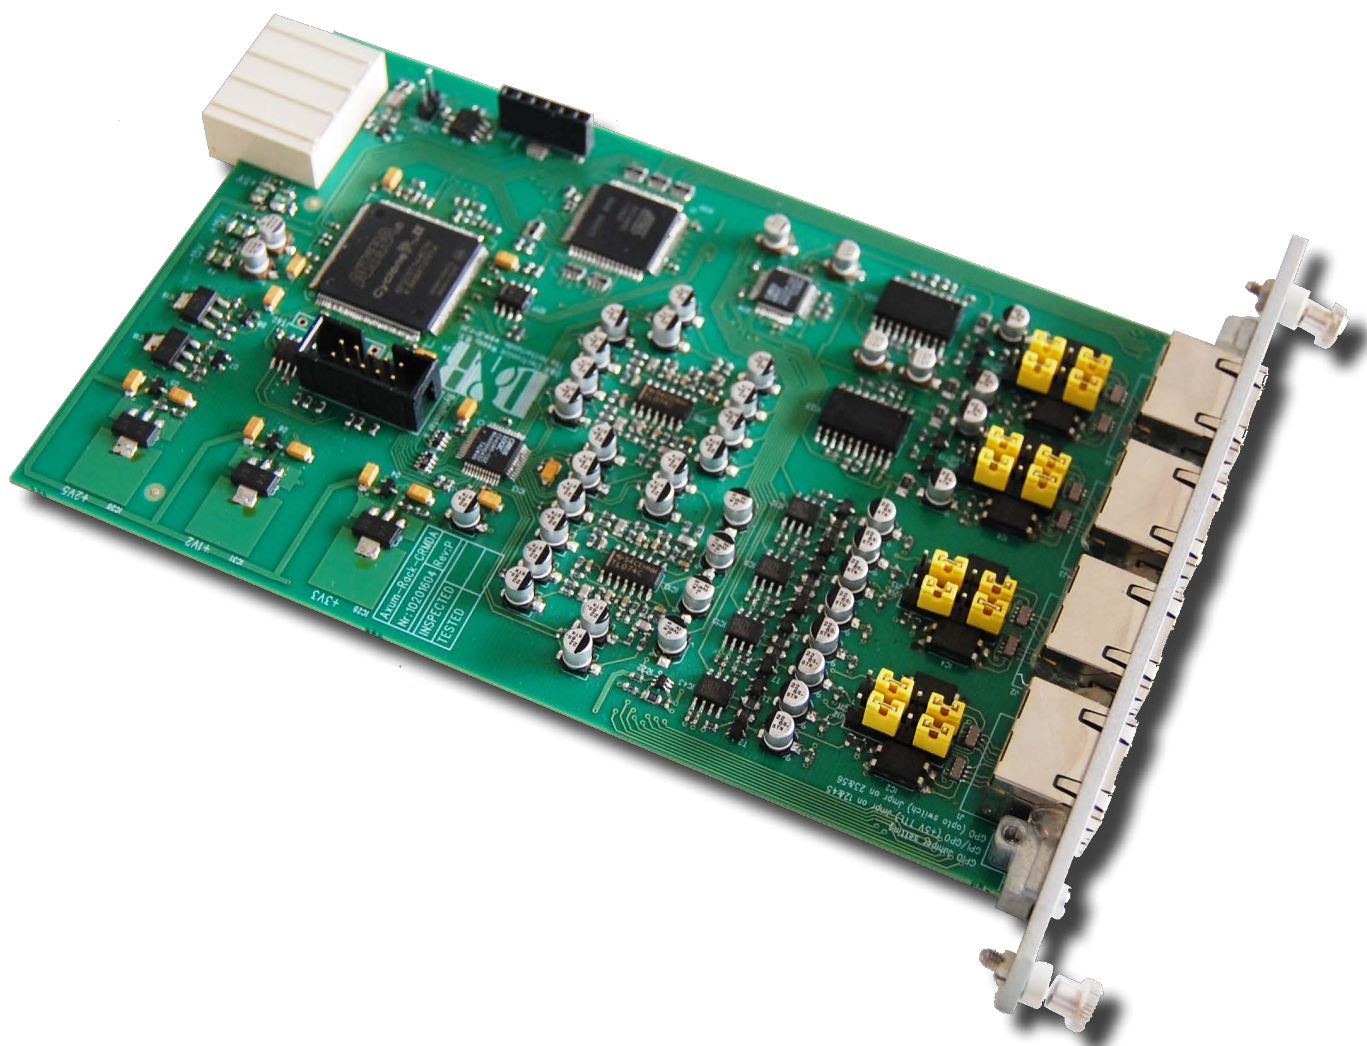


## *Define your I/O*

The modular concept based on MambaNet™ is also found in the I/O rack. Each I/O card can be shared or controlled in the network. The I/O cards in the rack are recognized in the network as inputs and outputs in a matrix. Mixing capabilities are available once one or more DSP cards are inserted.

In the following pages we will show and describe you all present available I/O cards currently available for the AXITE platform.

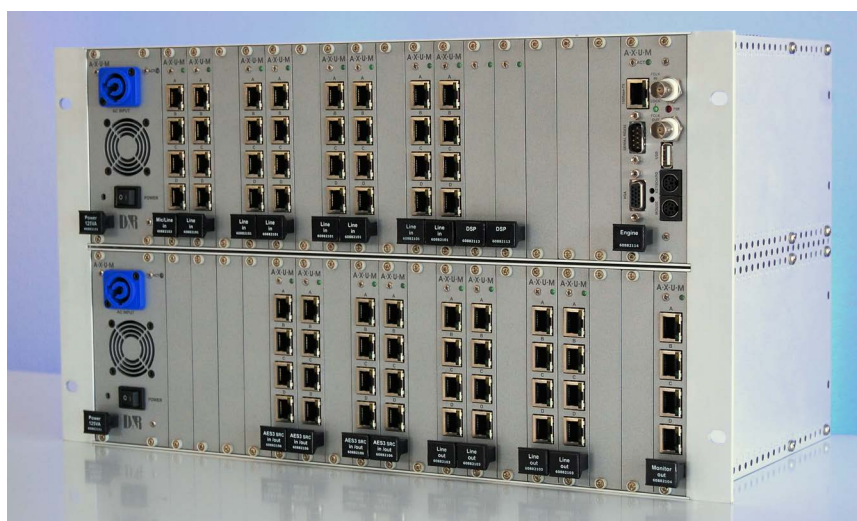



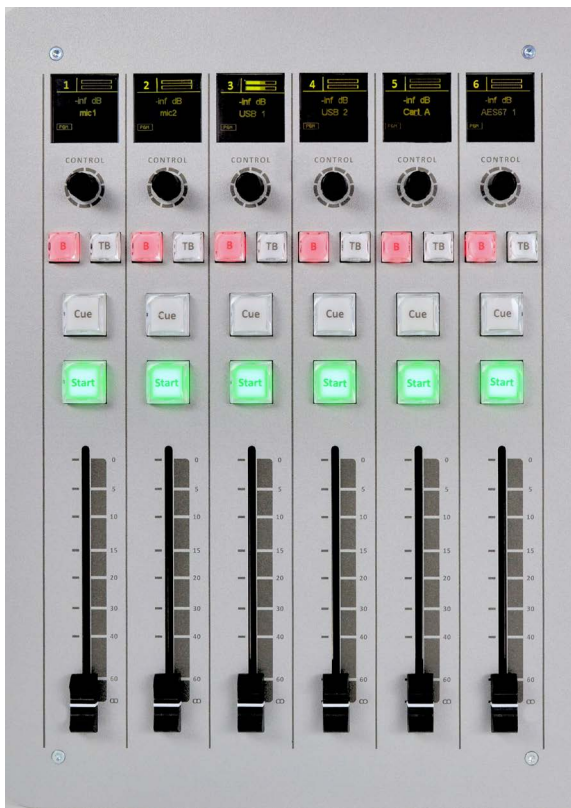

6 fader Axite extender



Axite main control screen



6 fader Axite main control surface



Back panel 6 fader Axite main unit


### *An example topology*

If you want a 12 fader studio, take the main unit with 6 faders and add a 6 fader extender to it by simply connecting it in the same LAN.

Additionally, this set-up has a separate central broadcast control room. Patching audio between the different studios is done via CobraNet™ or with our AES67-USB card. With D&R's CobraNet-Manager™ management software, you can visualize and control the complete audio network. The local audio (per studio) can be connected to the local racks allowing you to select the desired I/O cards in the racks.


The central control room Axite I/O rack can be controlled by any control surface connected to the MambaNet™ network. This gives you maximum control over all your sources. And... If you want more? Simply add one or more Axite system components to the network. The Ethernet cloud can be filled with any Ethernet design your system administrator would want. An optional and valid solution is to have a network switch (Ethernet managed switch) in every studio booth. If requested, a redundant topology can be implemented in this set up.



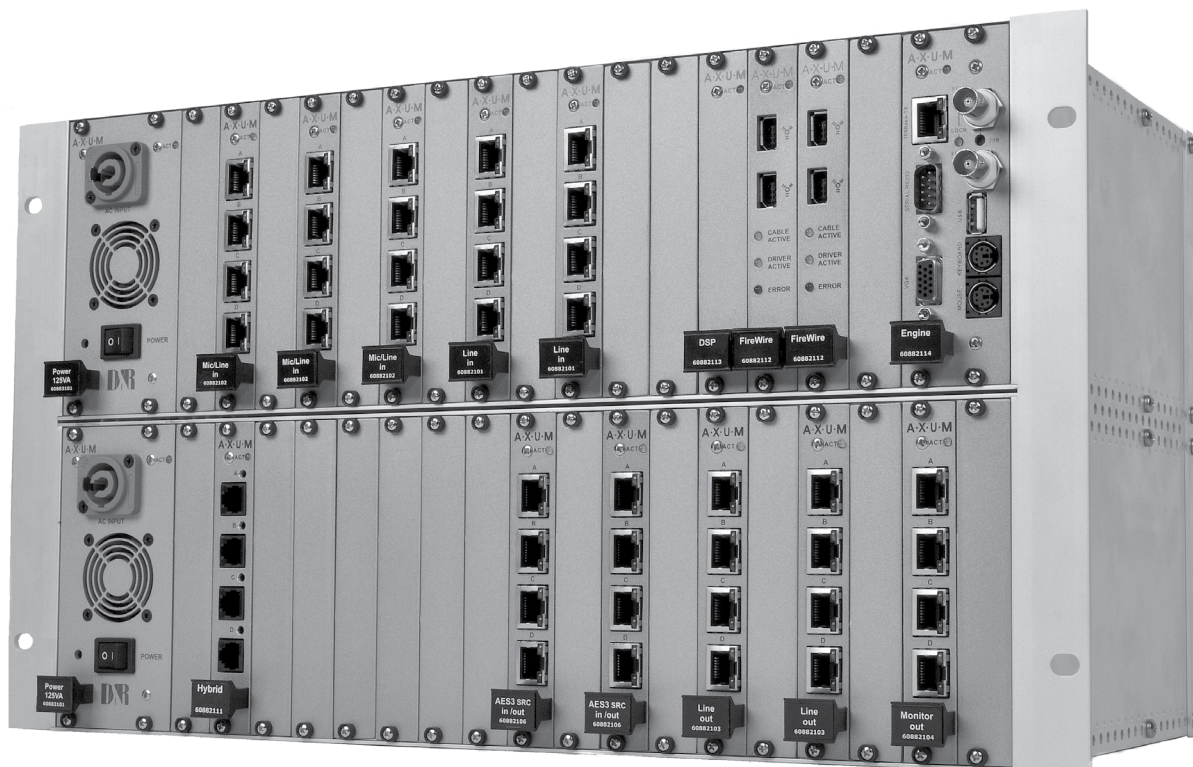



## RACK-TWO with a selection of in/output modules

### *Rack-mounted system interface units*

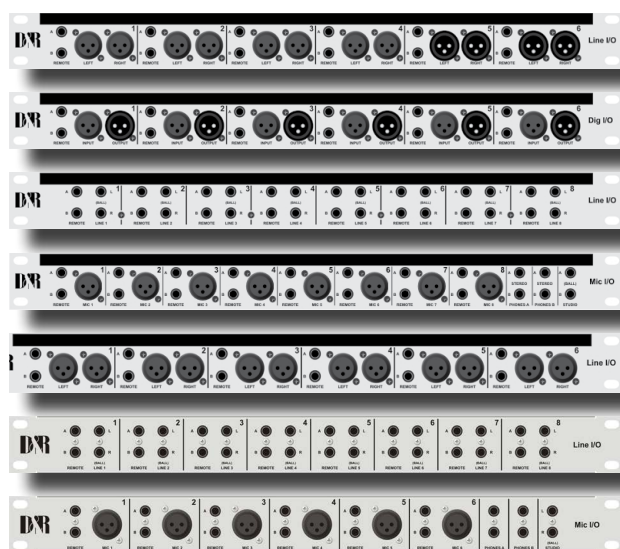

The defacto standard for interfacing digital audio components to I/O racks is by use of RJ45 connectors with STP (Shielded Twisted Pair) cable. D&R used this breakout system in earlier D&R consoles with succes. The rack-mounted interface units have either balanced 1/4" Jacks and/or XLR connectors on the front panel and shielded RJ45 connectors on the back panel that are used to connect to the I/O rack. On the left and below you see a number of passive break out panels.

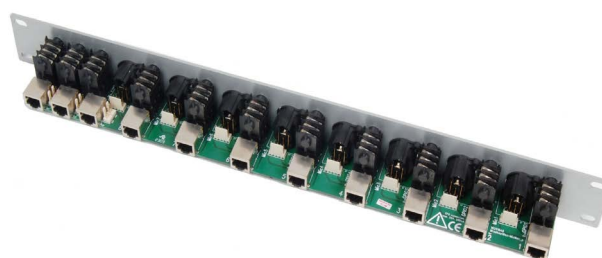

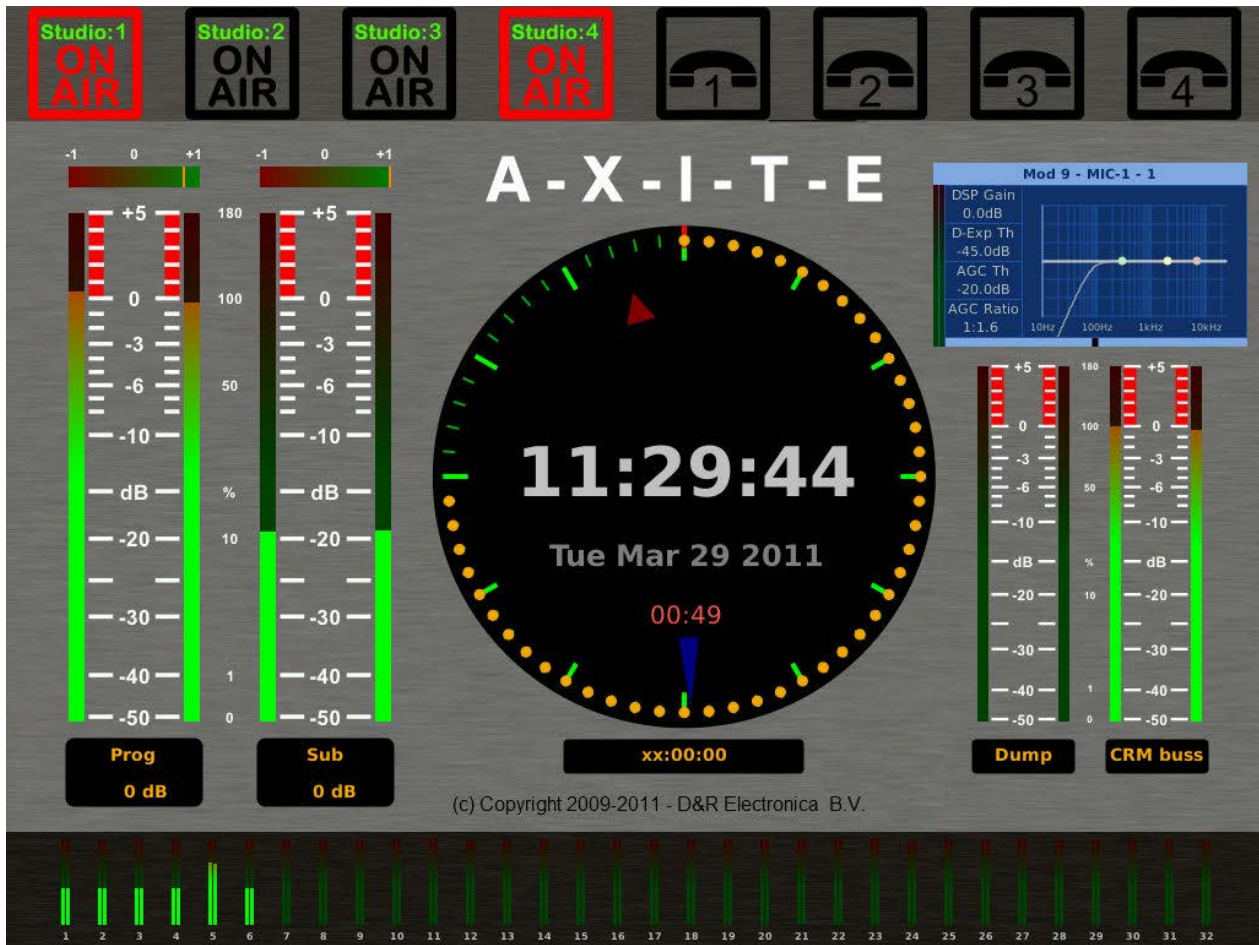

AXITE meter screen, that can directly be seen when you connect a HDMI connector to the control surface

### *Maintenance, tech support & staying up to date*

The D&R Axite utilizing MambaNet™ CobraNet™ and AES67 (compatible with Dante) was designed as a long term solution to the needs of Broadcast facilities for future innovations and developments in broadcast audio and software.

The Axite allows Broadcast facility personnel to plan and implement their requirements from a large group of currently available components as well as future developed components. The latest info on updates will be available on the D&R website at <https://www.d-r.nl> or you can contact our main office sales department in The Netherlands. Although the Axite hardware and software network is easy to install and understand, one of the D&R system engineers can log on to your network with TeamViewer and check your system from the D&R main office in minutes if needed.

Also available for download and display on the D&R website are all the related brochures and manuals of the AXITE. There is also a "whitepaper" for the MambaNet™ network. The product/technical brochure gives you insight in the currently available worksurfaces, panels, and I/O cards as well as their technical specifications. The MambaNet™ whitepaper gives a look into the basics of this studio platform. This could be valuable information for your technicians and/or system/network administrators as well as other equipment manufacturers.

Feel free to contact us!

## Imagine... one Rack with 4 independant Studio's and Control Surfaces



## Yes... that is possible

**T**his brochure provides and outlines the technical information of the hardware components available for the AXITE platform. Use this information to help you select the hardware components you need for your application. The system components communicate with each other using the MambaNet™ protocol. This protocol, (developed by D&R), can operate on different hardware and software layers (Ethernet, TCP/IP, CAN, RS232, Firewire, etc...). The protocol is designed to be future proof and is open source software for customers and other manufacturers to add their own surfaces or processing to the Broadcast studio platform. More information on MambaNet™ can be found in the MambaNet™ whitepaper.



Audio can be shared within your equipment setup by using a variety of I/O cards. For a networked audio solution we suggest using the rugged CobraNet™ audio network in combination with D&R's CobraNet™ Manager or the newer AES67 standard. When using these networked solutions it is possible to have all your studio interconnections based on Ethernet (level 2). Your local audio equipment may be connected with all well known industry standards such as XLR's, 1/4" Jacks, AES3 or another network solution. The concept of modular control surfaces fits perfectly in the virtual world of networking and MambaNet™. You only need to construct the 'perfect layout' for your studio by selecting the control surface modules required for your application.

It is possible to (re)configure your system's switches and knobs if needed when you connect the selected surfaces to the MambaNet™ network. Fixed workspace assignments are outdated these days. A small 6 fader broadcast ON-Air control surface can be created by using the main AXITE control surface with its Control Room section.

Other configurations (also in a split version, left and right from a script space) can be put together by yourself or your dealer.

Also our AXUM control surfaces can be connected in the network. This is an extra possibility to install a high end full blown control surface in one of your studio rooms.



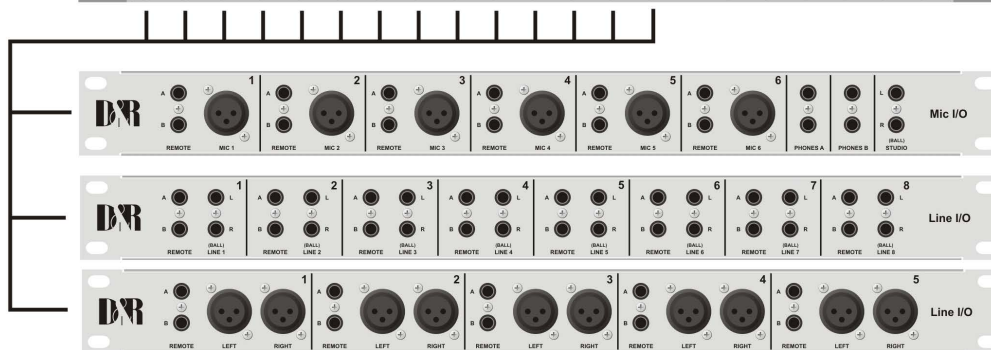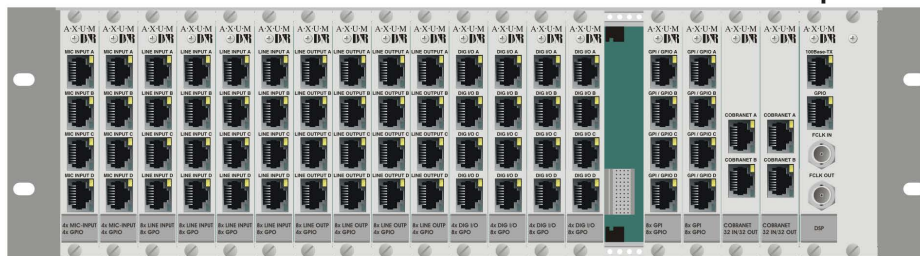

*6 fader set up example with Rack One and three break-out panels.*

*Total control over your station and...  
you can satisfying nearly  
any engineering demand!*





## Mic card

Each RJ45 connector on the microphone cards can be connected to a single balanced microphone and 2 GPIOs (General purpose input/outputs).

For the microphone you have software control over:

- Phantom power (+48V)
- PAD switch for 20 dB gain reduction
- Analog Microphone Gain
- Phase reverse
- Routing and summing per pair (1/2 and 3/4)
- Each GPIO can be an isolated GPO or 5v TTL GPIO. Functionalities of the GPIO are under software controlled, for example:
- Cough (GPI function)
- Communication (GPI function)
- MIC-on (GPO function)
- Red light (GPO function)




## Line input card

Every RJ45 connector on the line input card can be connected to a stereo balanced line signal and 2 GPIOs.

For each signal of a stereo line input you have digital software control over:

- Level
- Phase inverse
- Routing:
  - - Left to Left
  - - Right to Right
  - - Mono to Left
  - - Mono to Right
  - - Right to Left
  - - Left to Right
- Each GPIO can be an isolated GPO or 5v TTL GPIO.
- Functionalities of the GPIO are under software control, for example:
  - Communication (GPI function)
  - Channel on (GPI function)
  - Start/Stop (GPO function)



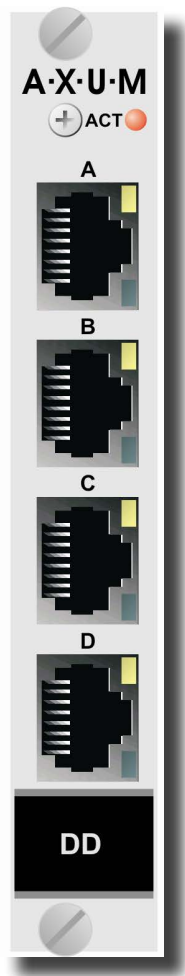

## Digital input/output card

Each RJ45 connector on the digital input/output card can be connected to an AES3 input, output and 2 GPIOs.

For each signal of a stereo digital input you have digital control over:


- Level
- Phase inverse
- Routing:
  - Left to Left
  - Right to Right
  - Mono to Left
  - Mono to Right
  - Right to Left
  - Left to Right

For each signal of a stereo digital output you have digital control over:

- Level
- Phase Reverse
- Routing
  - Left to Left
  - Right to Right
  - Mono to Left
  - Mono to Right
  - Right to Left
  - Left to Right
- Dimming
- Talkback to the output
- Total mute.

Each GPIO can be an isolated GPO or 5v TTL GPIO. Functionalities of the GPIO are software controlled, for example:

- Communication (GPI function)
- Channel on (GPI function)
- Start/Stop (GPO function)
- Cue (GPO function)
- Cue (GPO function)

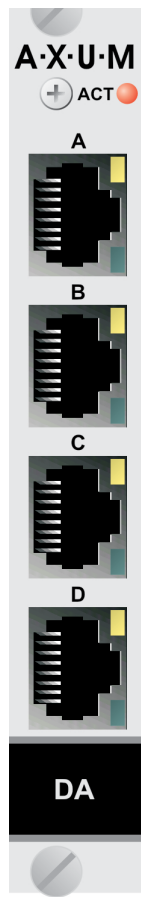

## Line output card

Each RJ45 connector on the line output card has stereo balanced analog outputs and 2 GPIOs.

For each signal of a stereo digital output you have digital control over:

- Level
- Phase inverse
- Routing
- - Left to Left
- - Right to Right
- - Mono to Left
- - Mono to Right
- - Right to Left
- - Left to Right
- Dimming
- Talkback to the output
- Total mute

Each GPIO can be an isolated GPO or 5v TTL GPIO.

Functionalities of the GPIO are under software control, for example:

- Communication (GPI function)
- Channel on (GPI function)
- Start/Stop (GPO function)
- Cue (GPO function)

## CRM | Phone output card

RJ45 connector A and B are line level stereo bal outputs

Connectors C and D are headphone outputs.

All RJ45 connectors have 2 GPIOs.

You have digital control over:

- Total level
- Phase inverse
- Routing
- - Left to Left
- - Right to Right
- - Mono to Left
- - Mono to Right
- - Right to Left
- - Left to Right
- Dimming
- Talkback to the output
- Total mute

Each GPIO can be an isolated GPO or 5v TTL GPIO.

Functionalities of the GPIO are under

software control, for example:

- Communication (GPI function)
- Channel on (GPI function)
- Start/Stop (GPO function)
- Red-light (GPO function)



## CobraNet™ input/output card

The CobraNet™ card holds two RJ45 connectors that carry CobraNet data over Ethernet (level 2). CN A should be connected to your audio network. CN B may be used for a redundant connection. Utilizing the CobraNet™ connection, you can send and receive multiple audio channels. The number of audio channels is 16 send and receive mono channels.

For each signal received from CobraNet™ you have digital control over:


- Level
- Phase inverse
- Routing:
  - Left to Left
  - Right to Right
  - Mono to Left
  - Mono to Right
  - Right to Left
  - Left to Right

For each signal sent to CobraNet™ you have digital control over:

- Level
- Phase inverse
- Routing
  - Left to Left
  - Right to Right
  - Mono to Left
  - Mono to Right
  - Right to Left
  - Left to Right
- Dimming
- Talkback to the output
- Total mute.

With D&R's CobraNet™ Manager Software, you can visualize and control the CobraNet™ audio network. Included with this card is a light version of CobraNet™ Management software



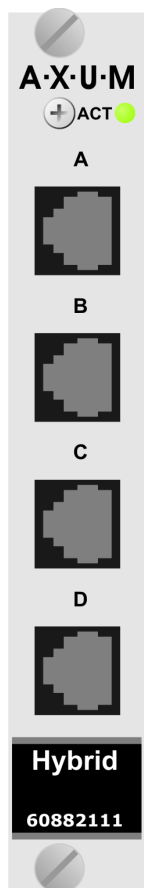

## Hybrid card

The Hybrid card contains 4 separate analog hybrids. Each RJ11 connector contains a telephone line in (wall) and out (telephone set).

For each hybrid input signal you have digital software control over:


- Level
- Phase inverse
- Routing

For each hybrid output signal you have digital control over:

- Level
- Phase inverse
- Routing
- Dimming / muting
- Talkback to the outputs

Hybrid functions:

- DTMS / FSK generation / detection.
- Caller ID
- Ring detection
- Multi hybrid to single channel.

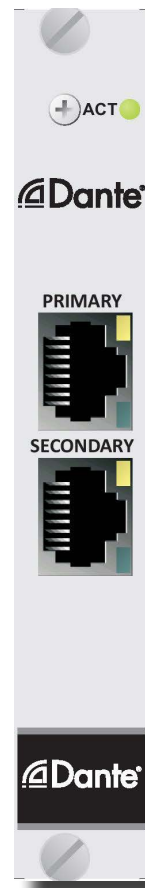

## Dante card

The Dante card can handle a total of 32 mono input and output channels.

A total of max 7 cards can be installed in the I/O Rack.

The following software is needed to stream to and from a Dante device/network.

- 16x16 audio with a WDM interface
- 64x64 channels audio with an ASIO interface

Price 2021 is € 30,--


Supported audio formats

The AXUM/AXITE Dante 32x32 card supports 16, 24 and 32 bit resolution with a sample rate of 44.1kHz or 48kHz.

USB Audio vs Dante Virtual Soundcard

Dante Virtual Soundcard audiostreams support up to 64x64 mono audio channels with 16, 24 or 32 bit resolution, 44.1kHz to 192kHz samplerate and a latency as low as 1ms.

The flexibility of the Dante network gives the end user a way of direct streaming to other Dante supported devices.

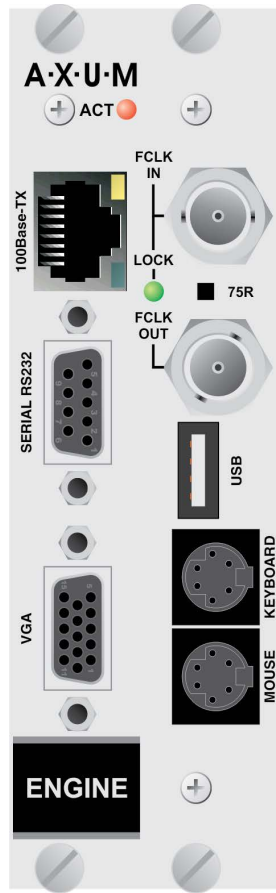

## AXUM engine card


The AXUM engine card controls the entire rack system. All information for the rack is processed on this card.

The RJ45 Connector should be connected to the Ethernet switch that is connected to all MambaNet™ compatible devices.

Advanced functions can be accessed by using the following interface connectors:

- RS232
- VGA
- Keyboard
- Mouse
- USB

On the BNC connection you can connect a word clock output signal or a word clock input signal. The input signal can be terminated with 75 Ohm using the latching switch.

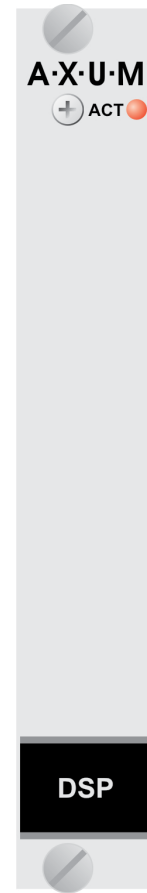

## DSP card

By plugging a DSP card in the I/O rack you add mixing capabilities to your matrix. In combination with the engine card you will get an advanced mixing console.


The DSP card processes 32 stereo channels to 16 stereo busses and 4 stereo monitoring busses.

On an input channel the following processing is available:

- Low cut
- Gain
- EQ
- Dynamics
- Level meter
- pre/post switching

You can insert a maximum of 4 DSP boards.

This gives you a mixing console of 128 stereo channels to 16 stereo busses as well as 16 stereo monitoring busses.

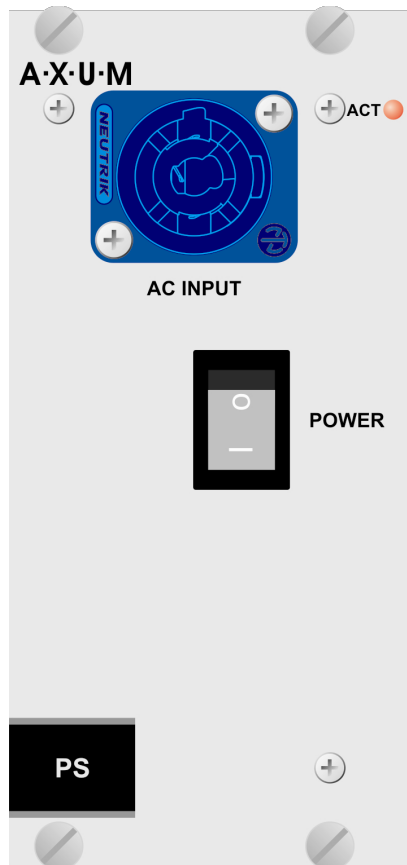

## Power supply card



AES67 I/O Card

## Drop through Frames

We also have AXITE droptrough frames that can be mounted elegantly inside furniture.



6 fader main unit with CRM Section



6 FADER Extender section



## Frame sizes

The AXITE has a choice out of a 6 fader main frame, see at the right side and a 6 fader Extender, shown at the left side.

There is no limit to the number of 6 fader Extenders that can be connected to the I/O Rack.

You can even create 4 independant studios connected to the same I/O Rack, so they can share all the in and outputs of the Rack.

Also Talk back is pretty easy to all studio's when they are in the a same LAN.



AXITE 6 fader Extender frame



AXITE 6 fader main frame



Add an extra AXITE 6 fader Extender  
and create an 18 fader system

**Either you control the AXITE locally...**

**or... via remote control from anywhere**






## The Company

D&R has been operating for 47 years now and its intention is always to make the best products possible for a reasonable price. Our export business worldwide to every country you can think of has brought us a steady growth in turnover and widespread distribution among buyers. Initially D&R started in the seventies with live sound mixing consoles and expanded to recording consoles. The managing director Duco de Rijk and founder of D&R has started this company back in 1972. The past 20 years D&R is mainly involved in Broadcast related products, such as the AXUM, AIRLITE-USB, AIRMATE-USB, AIRENCE-USB, AIRLAB, LYRA and a range of Hybrid related products.

D&R is an independent financially stable company without any external funding by banks or investors. And, as of this year 2019 D&R is already 47 years in business. A moment to thank all present D&R people and those who worked for and with us in the past, for their unbelievable loyalty and input. It is these fine people who have made D&R into a dynamic and professional audio company for which virtually no task is impossible. It has been a fantastic challenge for our people, all of whom are united as part of this stable family company in a genuine passion for the professional audio industry. We hope to serve you for a long time to come and that you enjoy our products just as we do.



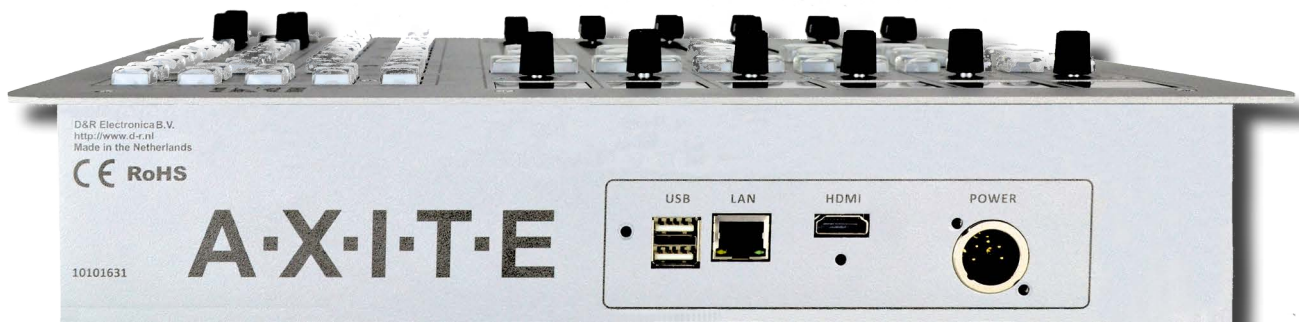

Backpanel Axite main frame with connectors for Power, Flatscreen monitor, Ethernet and USB (future options)

## CABLING:

### *Connecting system parts:*

All system parts of the AXITE will be connected using the well known Ethernet standard. These connections have to be confirming IEEE 802.3 standard, where each system part has a 100BASE-TX connection. With switches you can make larger networks with various types of interconnectivity. We advice to only use managed switches in your system, although unmanaged switches will function normally. For your information we hereby specify some connection standards available on standard Ethernet.

| Name       | Mbps | Cable                   | Max. length |
|------------|------|-------------------------|-------------|
| 100BASE-TX | 100  | unshielded twisted pair | 100 m       |
| 100BASE-FX | 100  | multimode fiber         | 2 Km        |
| 100BASE-T  | 1000 | unshielded twisted pair | 100 m       |
| 100BASE-SX | 1000 | multimode fiber         | 500 m       |
| 100BASE-LX | 1000 | single-mode fiber       | 5 Km        |
| 100BASE-ZX | 100  | single-mode fiber       | 70 Km       |

If your system only has one single surface and one I/O rack, it is possible to connect these system parts with a cross cable (after you have configured your I/O rack). This is a basic setup, saves cost, but it means you can not expand your system without first adding a switch into your network.

All external audio equipment can be connected to the passive 19" rack-mount breakout panels with standardized connectors such as XLR male/female and jacks as described earlier. From these 19" passive rack-mountable breakout panels you can connect the XLR/Jack in/outputs that are hardwired to RJ45 connectors on the back of these panels directly to your AXUM system with shielded twisted pair cable (STP).

The I/O cards in the 19" AXITE rack have equivalent RJ 45 connectors to accept these STP cables.

It depends upon the installation needs which passive rack-mount breakout panel will be used to connect with the AXITE I/O cards.

For your info STP cable is the only choice and can be used up to lengths of 100 meters.



## Technical Highlights:

### General:

- Matrix up to 1280x1280.
- Headroom: adjustable 0dB... 20dB
- Tone generator.

### Synchronization:

- Word clock input or internal generator.
- 32 kHz, 44.1 kHz, 48 kHz.
- Word clock in/out 75 Ohm.

### DSP

- 32 floating point processing.
- 32 stereo channels (max. 128 stereo channels).
- 6 band parametric equalizer | Dynamics | LowCut
- 16 stereo mixing busses.
- (Program | Sub(Rec) | Cue | Comm | 12x stereo Aux).
- 4 stereo monitor busses (max. 16 monitor busses)
- Max. 4 DSP cards per I/O rack.

### MIC

- Electronically balanced, 2Kohm.
- Analog input sensitivity -70dBu up to +20dBu.
- CMRR MIC inputs: 85dB @ 1kHz, maximum gain.
- Optional transformer balancing.

### Line input

- Electronically balanced, 10kOhm.
- Nominal level +6dBu, maximum +26dBu.
- CMRR Line inputs: 50dB @ 1kHz, maximum gain.
- Optional transformer balancing (on I/O panels).

### Line Output

- Electronically balanced, <47Ohm.
- Nominal level+6dBu, max. output level+26 dBu.
- Optional transformer balancing.

### CRM Output

- Electronically balanced, <47 Ohm.
- Output level +6dBu, max. output level +26 dBu.
- Optional transformer balancing.
- Headphones out
  - 80mW into 600R.
  - Minimum load 8 Ohm.

### Digital Inputs/Output

- AES/EBU (AES3), S/P-DIF.
- 16/20/24 bit.
- THD+N: -105dBfs @1kHz, -1 dBFS.
- In/output imp. 110 Ohm / 75 Ohm (transf In/Out)
- Outp. level: >5Vpp (into 110 Ohm load)
- Input sensitivity: >200mV

### GPI

- 5V TTL, 100 kOhm input impedance

### GPO

- Selection of optical isolated relay or 5V TTL output
- Optical isolated relays is max: 50V at 200mA

## Frames/panels

### Main Frame:

- 6 faders : e.g. 6 modules + CRM/Studio
- Outside dimensions : 375x335x30/65 mm
- Drop through hole : 350x310 mm
- Weight : 10 Kg

### Extender Frame:

- 6 Faders: eq 6 module positions
- Outside dimensions : 255x335x30/65 mm
- Drop through hole : 230x310 mm
- Weight : 8 Kg

### Rack ONE:

- 21 slots : 16 for DSP and I/O cards
- Outside dimensions (WxHxD) : 483x133x260 mm

### Rack TWO:

- 42 slots : 34 for DSP and I/O cards
- Outside dimensions (WxHxD) : 483x266x260mm

### I/O Cards:

- Mic card : 1 slot
- Line input card : 1 slot
- Digital input/output card : 1 slot
- Line output card : 1 slot
- Hybrid card : 1 slot
- FireWire card : 1 slot
- CRM/Phone output card : 1 slot
- CobraNet™ input/output card : 1 slot
- AES 67 USB input/output card : 1 slot
- DSP card : 1 slot
- AXUM engine card : 2 slots
- Power supply card : 3 slots

## Specifications AXITE digital Audio System

|                 |  |
|-----------------|--|
| MIC inputs      | <ul style="list-style-type: none"> <li>: Electronically balanced</li> <li>: Input impedance 2k Ohm</li> <li>: Input sensitivity -70dBu up to +20dBu (PAD) (PGA2500)</li> <li>: Dynamic Range 118dB (AD converter PCM4202)</li> <li>: Total Harmonic Distortion plus Noise -108dB (30dB gain)</li> <li>: CMRR MIC inputs: 85dB @ 1kHz, maximum gain</li> <li>: Frequency response 20Hz - 20kHz <math>\pm</math> 0.1dBr (sample rate 48kHz)</li> <li>: Crosstalk 1kHz &lt; -118dBr</li> <li>: Phantom is switchable +48 Volts</li> <li>: Transformer balancing is optional on the break-out panel</li> </ul> |
| Line inputs     | <ul style="list-style-type: none"> <li>: Electronically balanced</li> <li>: Input impedance 10k Ohm</li> <li>: Input sensitivity +6dBu, maximum input +26dBu (+/- 20dB gain range).</li> <li>: Dynamic Range 118dB (AD converter PCM4202)</li> <li>: Total Harmonic Distortion plus Noise -105dB</li> <li>: CMRR Line inputs: 30dB @ 1 kHz</li> <li>: Frequency response 20Hz - 20kHz <math>\pm</math> 0.1dBr (sample rate 48kHz)</li> <li>: Crosstalk 1kHz &lt; -123dBr</li> <li>: Transformer balancing is optional on the brake-out-box</li> </ul>  |
| Line Outputs    | <ul style="list-style-type: none"> <li>: Electronically balanced</li> <li>: Output impedance 56 Ohm.</li> <li>: Nominal output level +6dBu, maximum output +26dBu</li> <li>: Dynamic Range 118dB (AD converter PCM4104)</li> <li>: Total Harmonic Distortion plus Noise -100dB</li> <li>: Frequency response 20Hz - 20kHz <math>\pm</math> 0.1dBr (sample rate 48kHz)</li> <li>: Crosstalk 1kHz &lt; -118dBr</li> <li>: Transformer balancing is optional on the brake-out-box</li> </ul>  |
| Phones Output   | <ul style="list-style-type: none"> <li>: Stereo unbalanced</li> <li>: Output impedance 5 Ohm.</li> <li>: Nominal output level +6dBu, maximum output +26dBu</li> <li>: Max. Output power, 1W into 32 Ohm, 80mW into 600R Ohm</li> <li>: Dynamic Range 114dB (AD converter CS4385)</li> <li>: Frequency response 20Hz - 20kHz <math>\pm</math> 0.1dBr (sample rate 48kHz)</li> </ul>   |
| Digital Inputs  | <ul style="list-style-type: none"> <li>: AES/EBU (AES3) or S/P-DIF Transformer balanced</li> <li>: Input Impedance: 110 Ohm / 75 Ohm (jumper setting)</li> <li>: Differential input sensitivity 200mV</li> <li>: Dynamic Range (sample rate converter) 144dB</li> <li>: Total Harmonic Distortion plus Noise (sample rate converter) -140dB</li> <li>: 16/20/24 bit, 32 kHz to 96 kHz (optional built in sample rate converter)</li> </ul>   |
| Digital outputs | <ul style="list-style-type: none"> <li>: AES/EBU (AES3) or S/P-DIF Transformer balanced</li> <li>: Output Impedance: 110R Ohm/75 Ohm</li> <li>: Output level: AES3 5 Vpp, S/P-DIF 1Vpp</li> <li>: 16/20/24 bit, 32kHz, 44.1kHz ore 48kHz</li> <li>: Total Harmonic Distortion plus Noise -140dB</li> </ul>   |
| GPIOs           | <ul style="list-style-type: none"> <li>: All GPO's are by opto isolated relays able to handle a max of 50V at 200mA or 5V TTL 560E 560R (8mA) out</li> <li>: All GPI's have a 5V TTL 100kOhm circuitry. GPIO-MIC has a 5V/560Ohm LED driver circuit</li> </ul>   |

## DSP Processing

EQ is 6 band, any band can perform one of the following functions/specifications:

|                  |   |
|------------------|---|
| Off              | : no function   |
| High Pass Filter | : +/- 18 dB (10Hz up to 20 kHz shelving/bell/notch), Q: 0.1 to 10 variable. |
| Low Shelf        | : +/- 18 dB (10Hz up to 20 kHz shelving/bell/notch), Q: 0.1 to 10 variable. |
| Peaking          | : +/- 18 dB (10Hz up to 20 kHz shelving/bell/notch), Q: 0.1 to 10 variable  |
| High Shelving    | : +/- 18 dB (10Hz up to 20 kHz shelving/bell/notch), Q: 0.1 to 10 variable  |
| Low Pass Filter  | : +/- 18 dB (10Hz up to 20 kHz shelving/bell/notch), Q: 0.1 to 10 variable  |
| Band Pass Filter | : +/- 18 dB (10Hz up to 20 kHz shelving/bell/notch), Q: 0.1 to 10 variable  |
| Notch Filter     | : +/- 18 dB (10Hz up to 20 kHz shelving/bell/notch), Q: 0.1 to 10 variable  |

DYNAMICS : Interactive one knob control for threshold, compression ratio, expander ratio as well as attack and release times.

Processing : 32 bit floating point

Channels : 32 stereo channels per DSP card.

Busses : 16 stereo mixing busses, free assignable Prog/CUE/Aux etc. etc.

Monitor busses : 4 stereo monitor busses per DSP card.

Additional information:

By configuration its possible to create more separate mixers, for example two consoles of 6 stereo channels to 8 stereo mixing busses, 2 stereo monitor busses.

A maximum of 4 DSP cards may be inserted giving you a mixing console of 128 stereo channels, 16 stereo mixing busses and 16 stereo monitor busses.

Module processing:

- Gain
- Low cut
- Insert
- 6 bands full parametric EQ
- D&R designed one knob dynamics
- 16 buss sends pre or post fader

Overall Level

- : 0dBu=0.775Vrms
- : 0dB internal = -20 dBFS.

Clock

- : Sample rate: 32kHz, 44.1kHz, 48kHz, +/- 20ppm (internally synchronized)
- : External sync: 32kHz, 44.1kHz, 48kHz +/- 50ppm
- : Jitter max 150pSec

Power supply

- : Neutrik™ PowerCon™ (delivered in the package).
- : 100-240 Volt, 50/60Hz (1.7A Max)

More detailed Specifications of the Burr Brown A to D and D to A Chips we use can be found on the following link <http://www.ti.com/lit/ds/symlink/src4392.pdf>

The Mic card uses the PGA2500 digital mic input chip followed by the 4392 chip as sample rate converter in 24 bits

The Line in card used the PCM 4202 A to D 24 bit converter chip

The Line Out card uses the PCM 4101 D to A 24 bit converter chip

We also confirm that the specs of our console can easily meet or succeed the below specifications for inputs and outputs.

Analog audio input/output, THD+Noise 0.0005% @-20dBFS

Digital audio input/output, THD+Noise 0.002% @-20dBFS

Mic/line input, THD+Noise 0.036% @-20dBFS



feels good does more

---

D&R Electronica BV, Rijnkade 15B, 1382GSA Weesp, The Netherlands  
Phone: +31 (0)294 418014 | Email: [sales@d-r.nl](mailto:sales@d-r.nl) | [www.dnrbroadcast.com](http://www.dnrbroadcast.com)